

# The ReadMe of Window WDDM Driver

## O.S. Support:

- Windows Server Series
  - Windows Server 2016 (WHQL)
  - Windows Server 2019 (WHQL)
  - Windows Server 2022 (WHQL)
- Windows Series
  - Windows 10 22H2 (WHQL)
  - Windows 11 23H2 (WHQL)
- Windows Series (ARM) (Preview)
  - Windows 11 ARM (Attestation sign)

## Driver Installation Guide:

### INF Installation:

- Windows Server 2016
  - Select INF file in Win2016
- Windows Server 2019
  - Select INF file in Win2019
- Windows Server 2022
  - Select INF file in Win2022
- Windows 10 22H2
  - Select INF file in Win10\_22H2
- Windows 11 23H2
  - Select INF file in Win11\_23H2
- Windows 11 ARM
  - Select INF file in Win11\_ARM

### Contact:

E-mail: [aspeed\\_vga\\_support@aspeedtech.com](mailto:aspeed_vga_support@aspeedtech.com)

ASPEED Technology Inc.